∜ Sonneteer

Campion

Integrated amplifier
Instruction Manual

Tori

NO TEST SIGNAL IS BETTER THAN HER MUSIC AND NO TEST INSTRUMENT BETTER THAN THE HUMAN EAR.

Campion should be placed in an open space away from moisture and with adequate ventilation.

The device is connected to the mains via an IEC mains lead which is provided with your Campion amplifier.

The IEC socket on the rear of the device has a replaceable fuse; see the specifications at the end of this manual for correct values.

Be sure that all appliances are turned off before disconnecting or connecting anything.

Campion has five inputs; Tp, CD, DIR, L1, L2 (Phono) and one output; LnOut. We recommend using DIR for best sonic performance. Tp, L1 should be used for line level signals e.g. Tape source. CD input is provided for high output level CD players. L2 is the phono input together with the earth stud, do not use this input for any other source.

Beware, do not have the Tape Source selected when LnOut is connected to it whilst recording as this will result in a very nasty experience.

For best loudspeaker connection use 4 mm banana plugs or spade connectors and be sure never to short positive and negative wires as this could have a detrimental effect on your speakers and your amplifier.

The controls on the front panel are, from left to right; Power, Source select and Volume.

When cleaning your Campion never use solvents. A clean dry cloth would be adequate.

Please note that there are no user serviceable parts inside the device and you should refer any problems to your dealer. Tampering with the device may void your warranty.

Technical specification

Power 33Wrms @8 Ohms

44Wrms @6 Ohms

Input impedence 11k Ohms

Gain 27dB

Input sensitivity:

DIR 650 mVrms CD 2 Vrms L1,Tp 400 mVrms

L2 (Phono) Gain = x1000 (47K @ 47pF)

Bandwidth 8Hz to 80kHz

THD 0.02% @1kHz @Full Power

0.035% @10kHz @Full Power

Size (mm) 434 x 74 x 280

Fuse Values:

UK/Europe/Australasia: 230V/240V, T 2.5 Amp USA/Canada 110V/120V, T 4.0 Amp

Sonneteer reserves the right to change specifications without prior notice.

If a fault occurs, please refer to your dealer. <u>Do not attempt to repair the unit yourself.</u>