

irDock

Connections and Quickstart Guide

 
 
 
irDock

ARCAM

Contents

Power Adaptor Setup	4
Docking your iPod	5
Charging	6
Standalone operation	8
Connections for any amplifier	8
Remote control (CR1)	9
Arcam Solo Mini	10
Connections	10
Remote control	11
Arcam Solo Music	12
Connections	12
Setup.....	13
Remote control	14
Arcam Solo Movie	16
Connections — SCART version	16
Connections — Component Video version	17
Setup.....	18
Remote control.....	19
Arcam T32.....	20
Connections	20
Remote control.....	21
Arcam AVR600, AV888	22
Connections	22
Setup OSD.....	23
Remote control.....	24
Navigation from the Front Panel.....	26
Song Selection.....	26
Changing Selection.....	27
Navigation from the On Screen Display.....	28
Song Selection.....	28
Changing Selection	29



Power Adaptor Setup

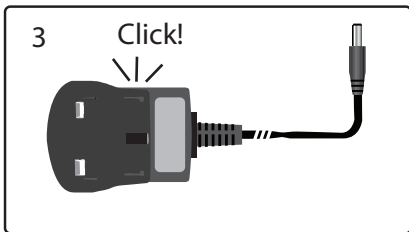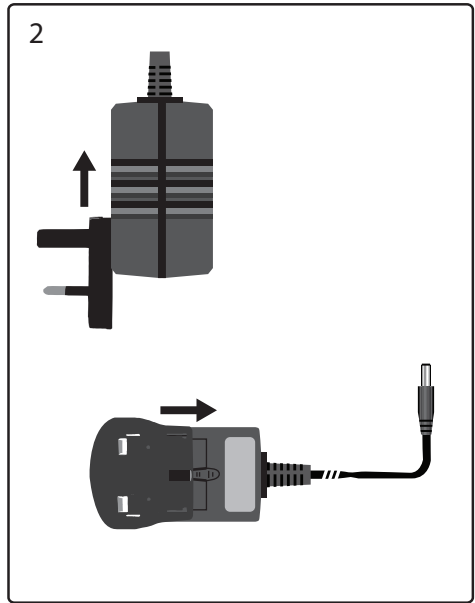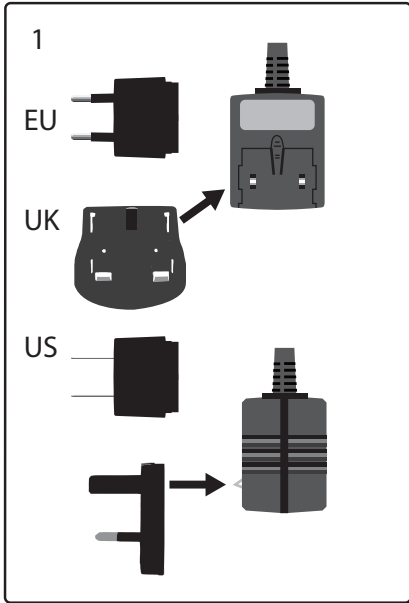


Docking your iPod

The docking adaptor is supplied with your iPod. It is important to fit the correct docking adaptor for your particular model of iPod. Failure to do so may result in damage to the irDock connector.

  Spare docking adaptors are available from Apple.

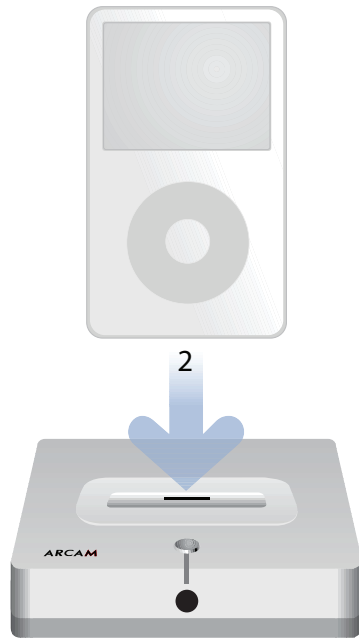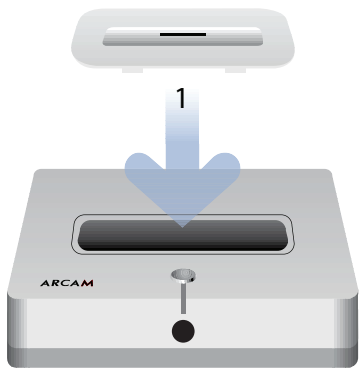


Charging

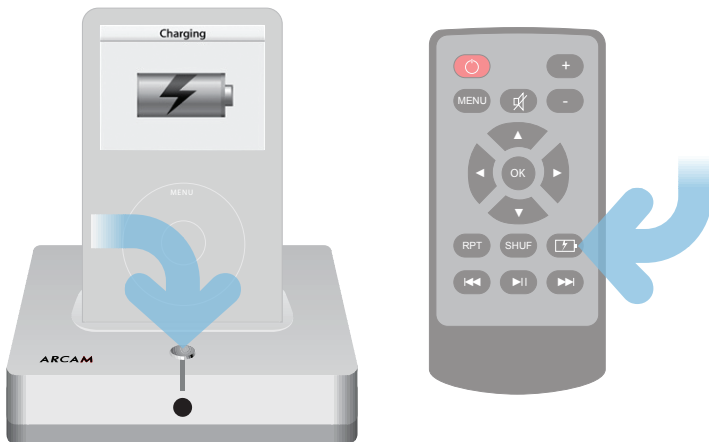 

Ⓒ charging on	red	charging off	blue
Ⓕ chargement en cours	rouge	chargement terminé	bleu
Ⓓ Ladevorgang ein	rot	Ladevorgang aus	blau
Ⓔ laden aan	rood	laden uit	blauw

Standalone operation

 Connections for any amplifier

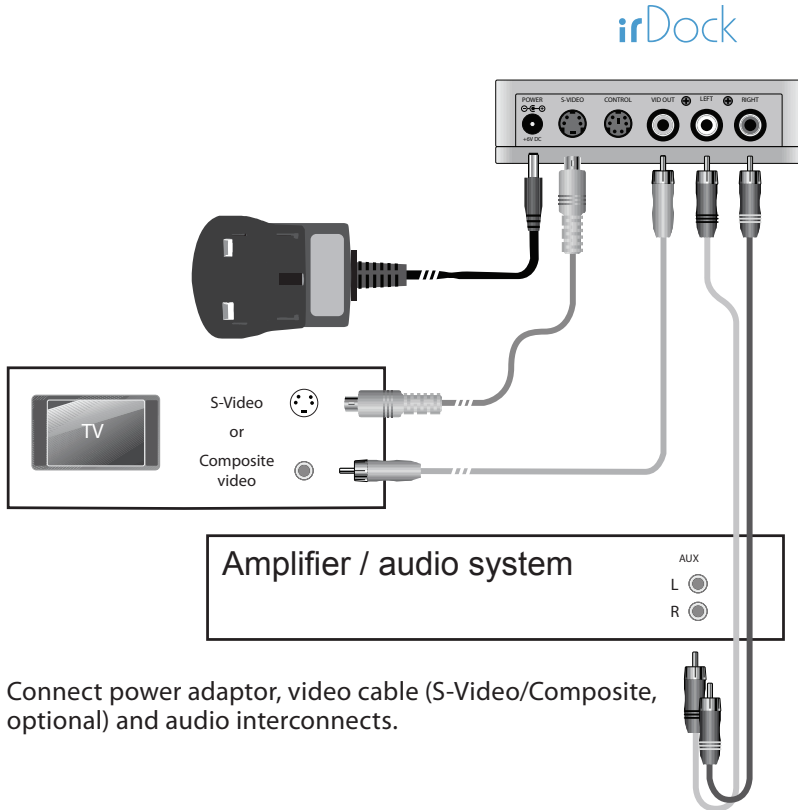













Remote control (CR1)

The supplied remote control can be used to control your iPod when the irDock is not connected to a supported Arcam product. If you are using the irDock with a supported Arcam product, use the Arcam system remote instead.

 
Please remove the plastic tab to connect the supplied batteries before use.




-  Turn the dock on/off.
-  Go to previous menu (Albums, Artists, Playlists etc.)
-  Mute the volume.
-  Increase or
-  decrease the volume.
-  Select music by playlist, artist etc.
-  Activate repeat and
-  shuffle playback modes.
-  Activate/deactivate iPod charging.
-  Start or pause playback.
-  Jump to the next track, track start or previous track in the current selection.
- 

Arcam Solo Mini

Connections

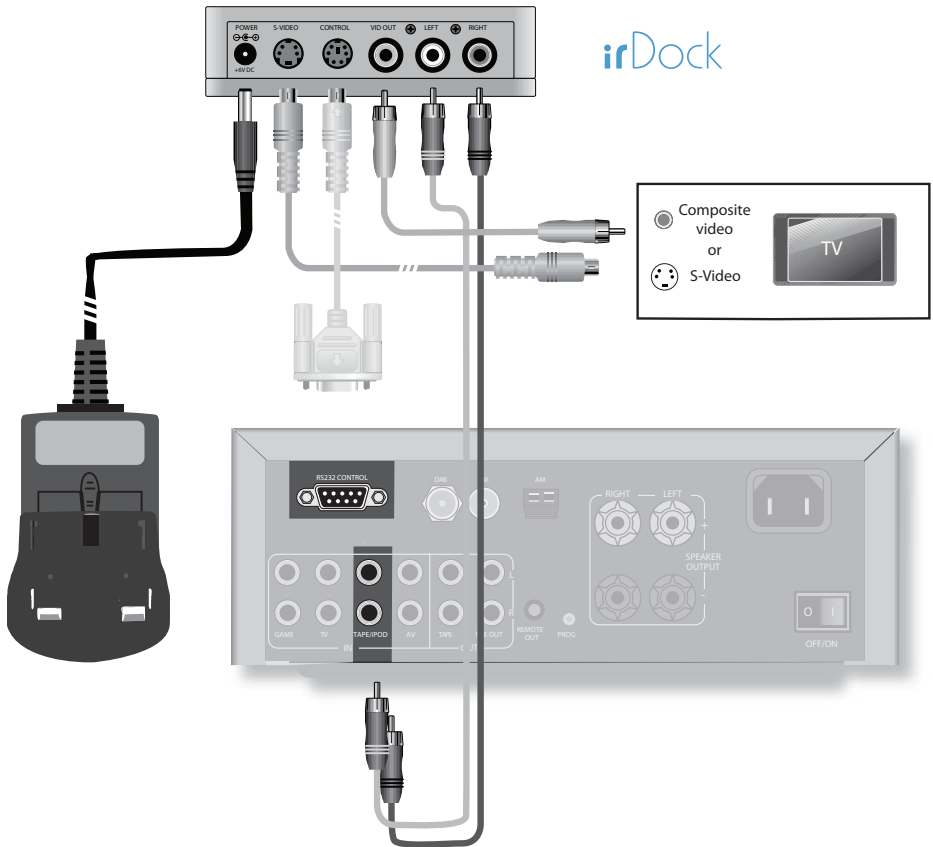


Remote control — Solo Mini

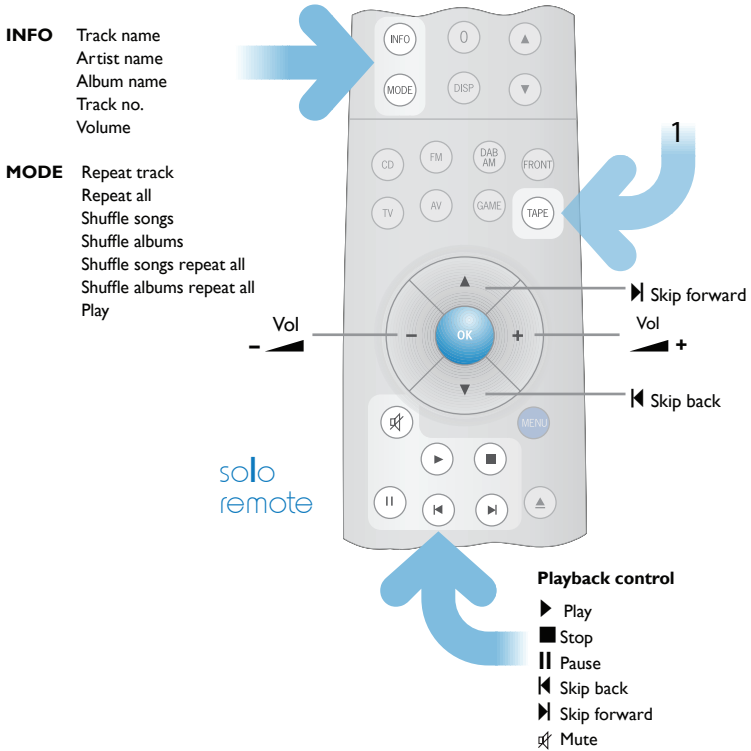 


Arcam Solo Music

 
Connections

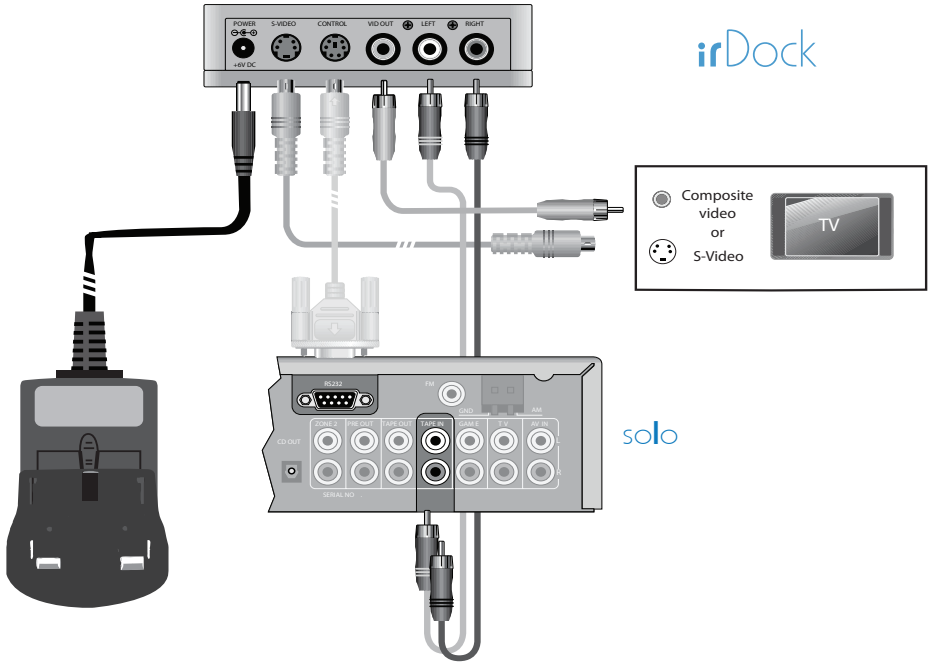

Setup — Solo Music

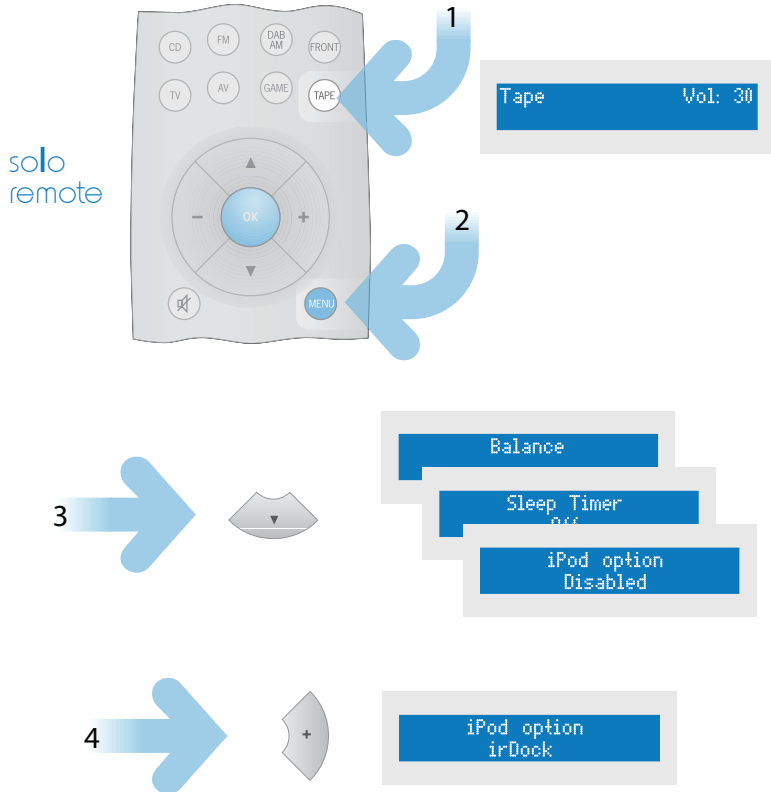 


Remote control — Solo Music

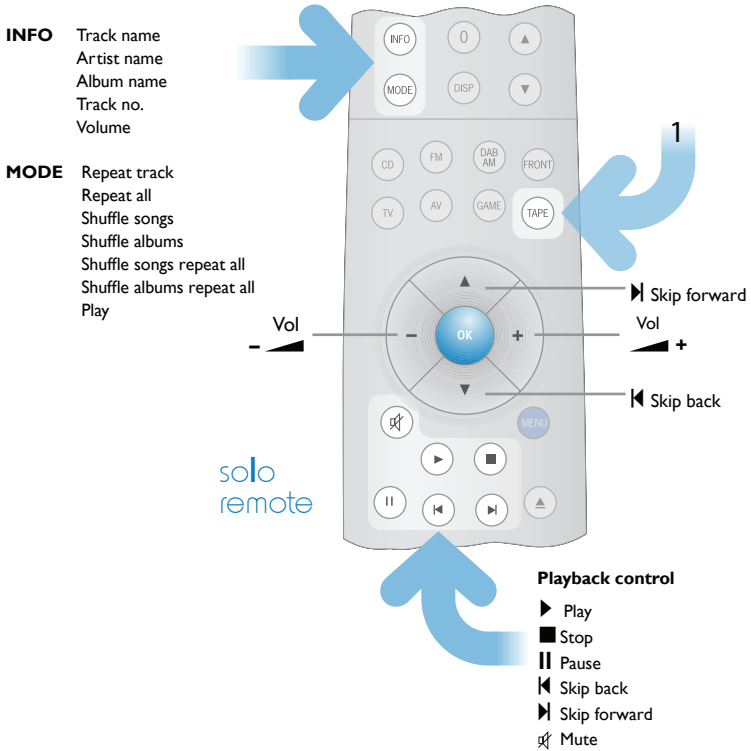 


Arcam Solo Movie




 
Connections — SCART version

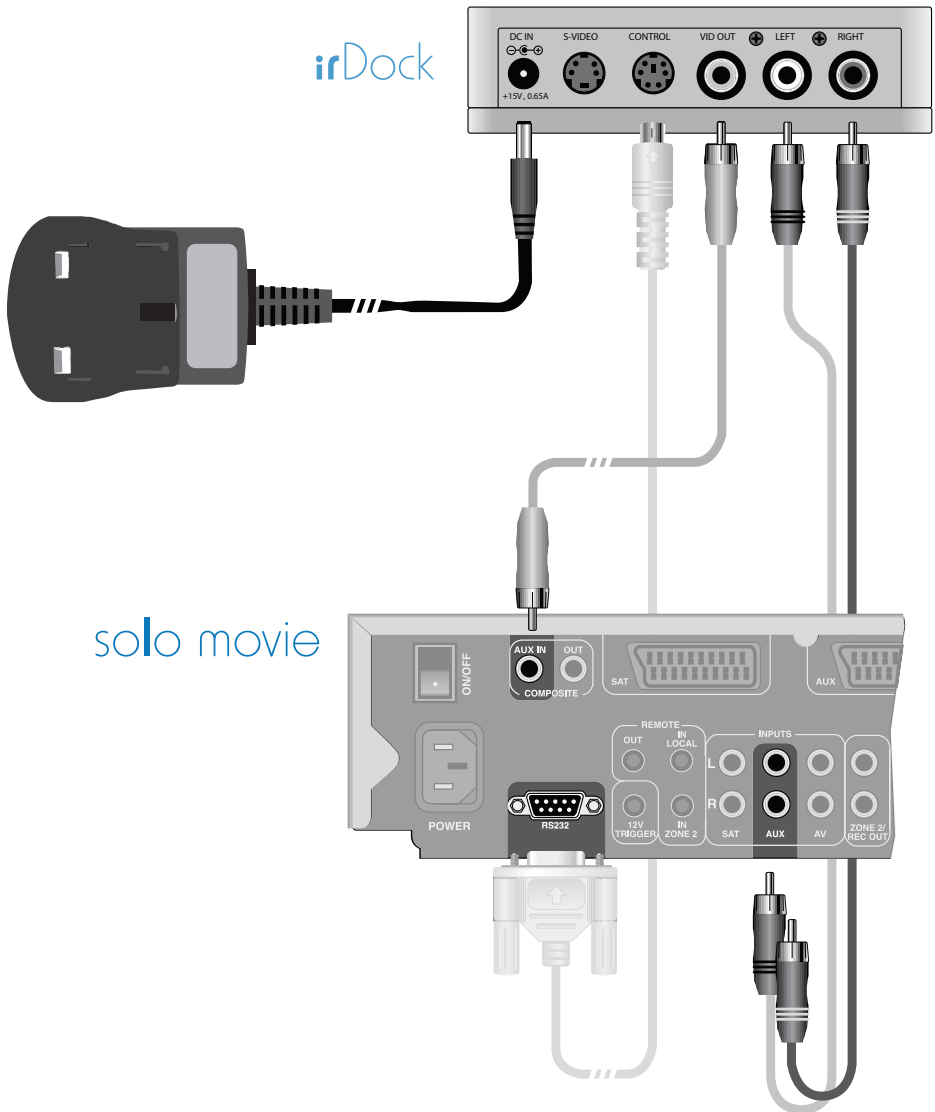


Connections — Component Video version

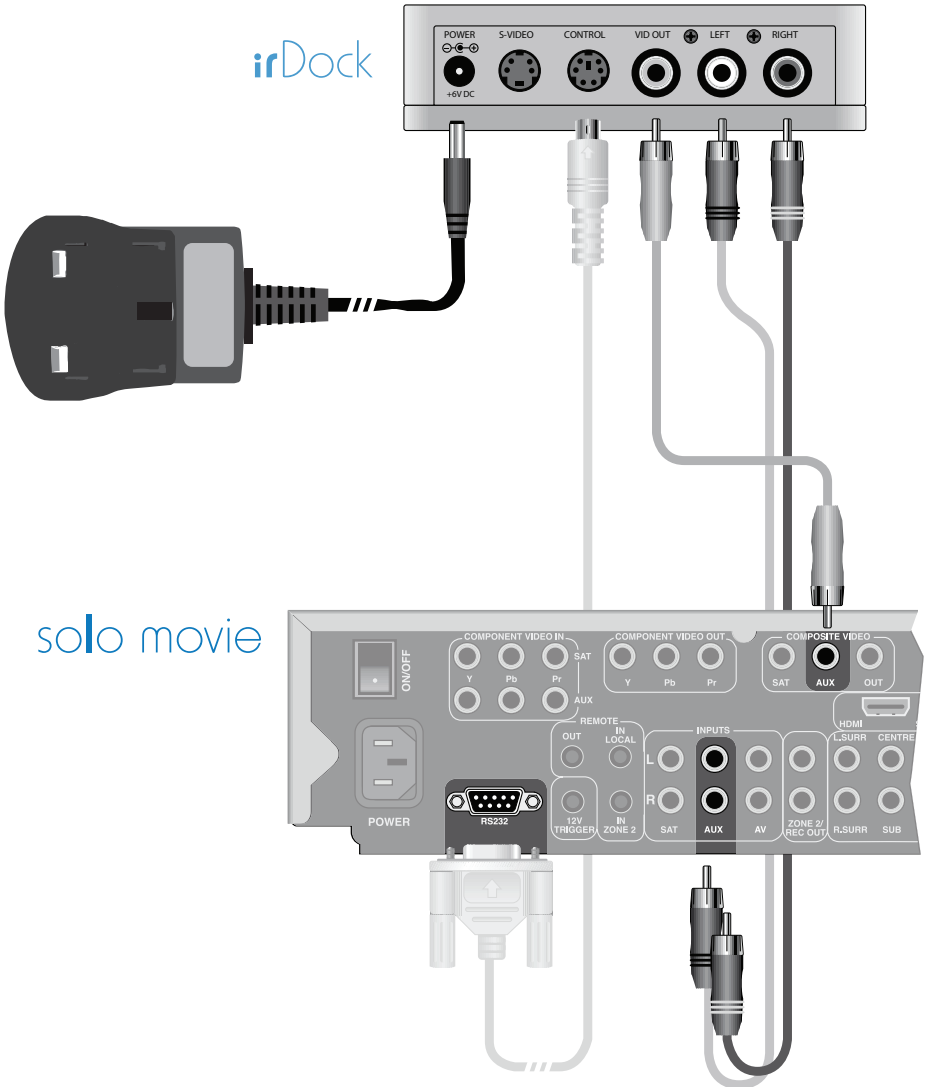 

Setup — Solo Movie

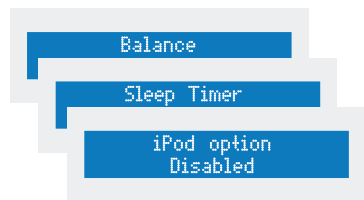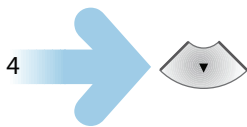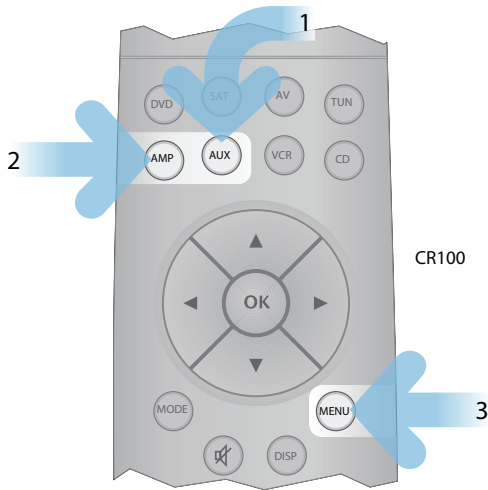    


Remote control — Solo Movie (CR100)

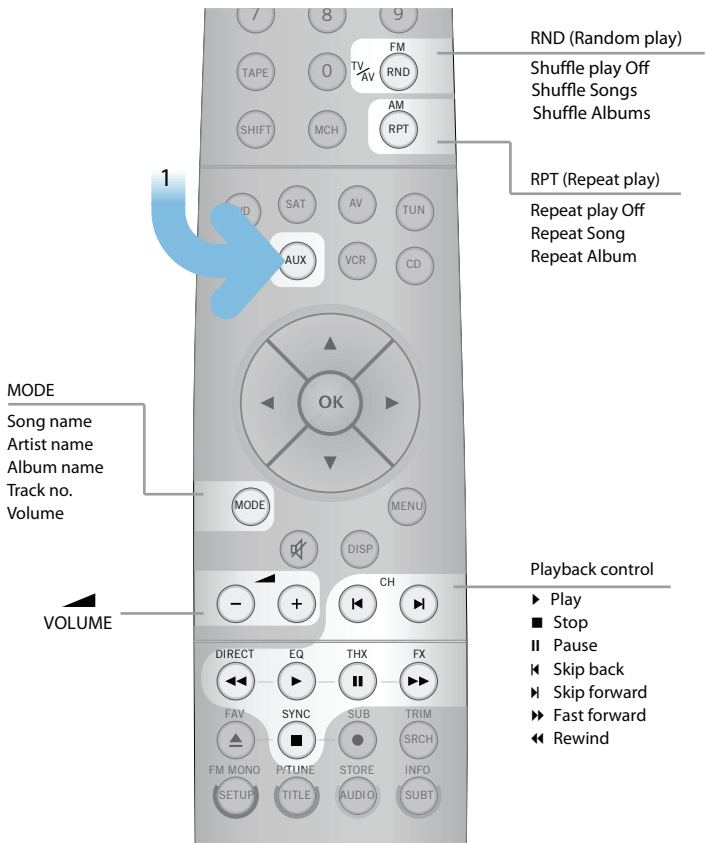 


Arcam T32

Connections

 irDock

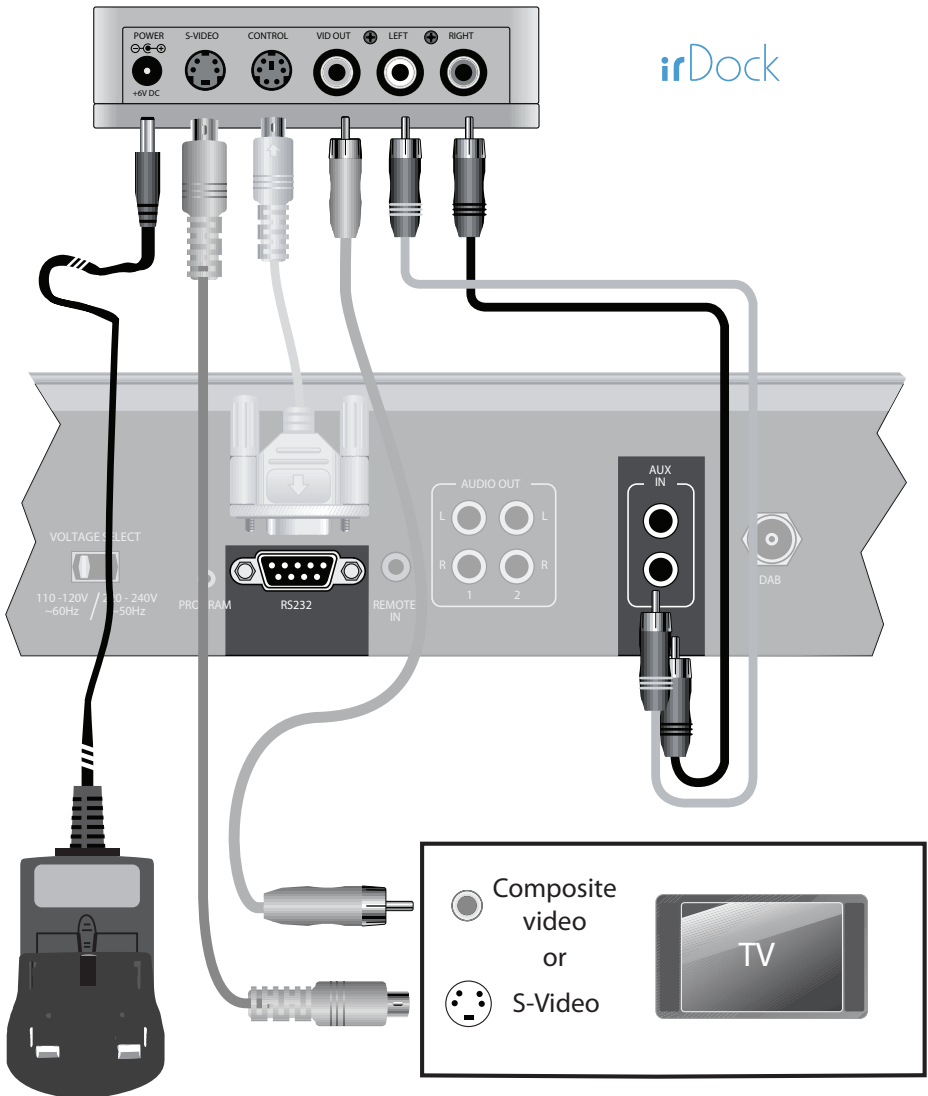


Remote control — T32 (CR90)

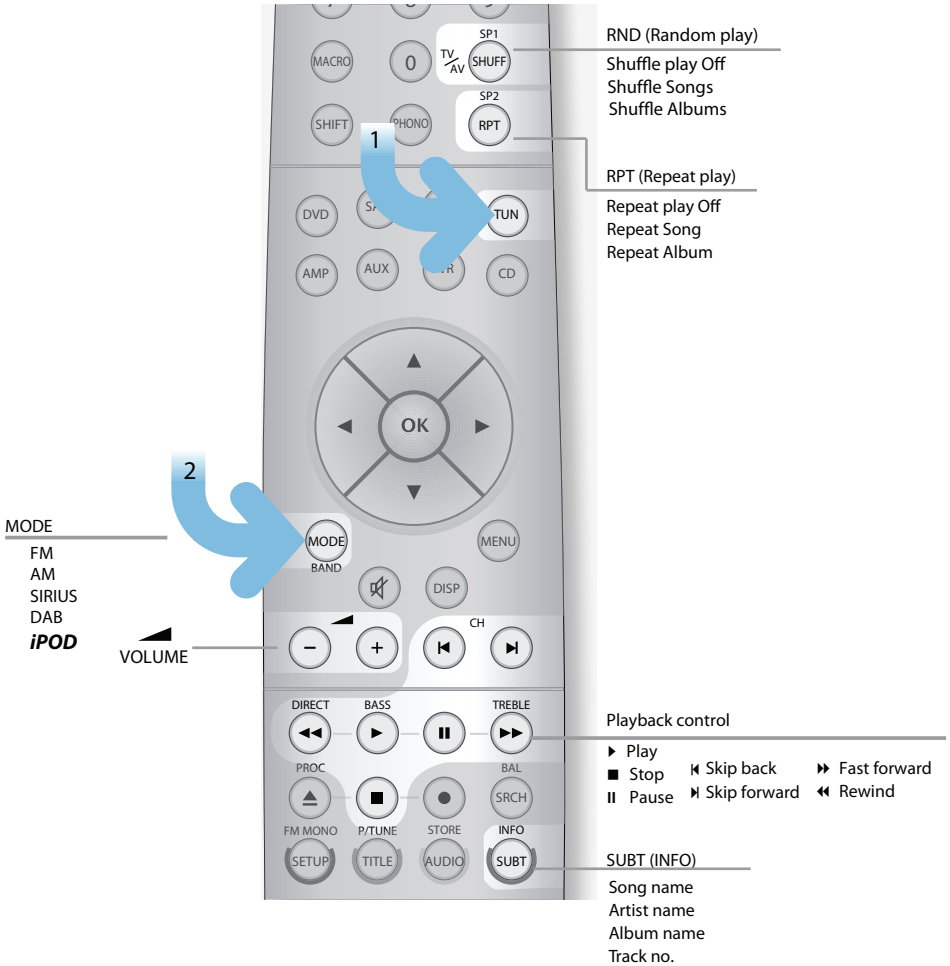 

Arcam AVR600, AV888

 Connections

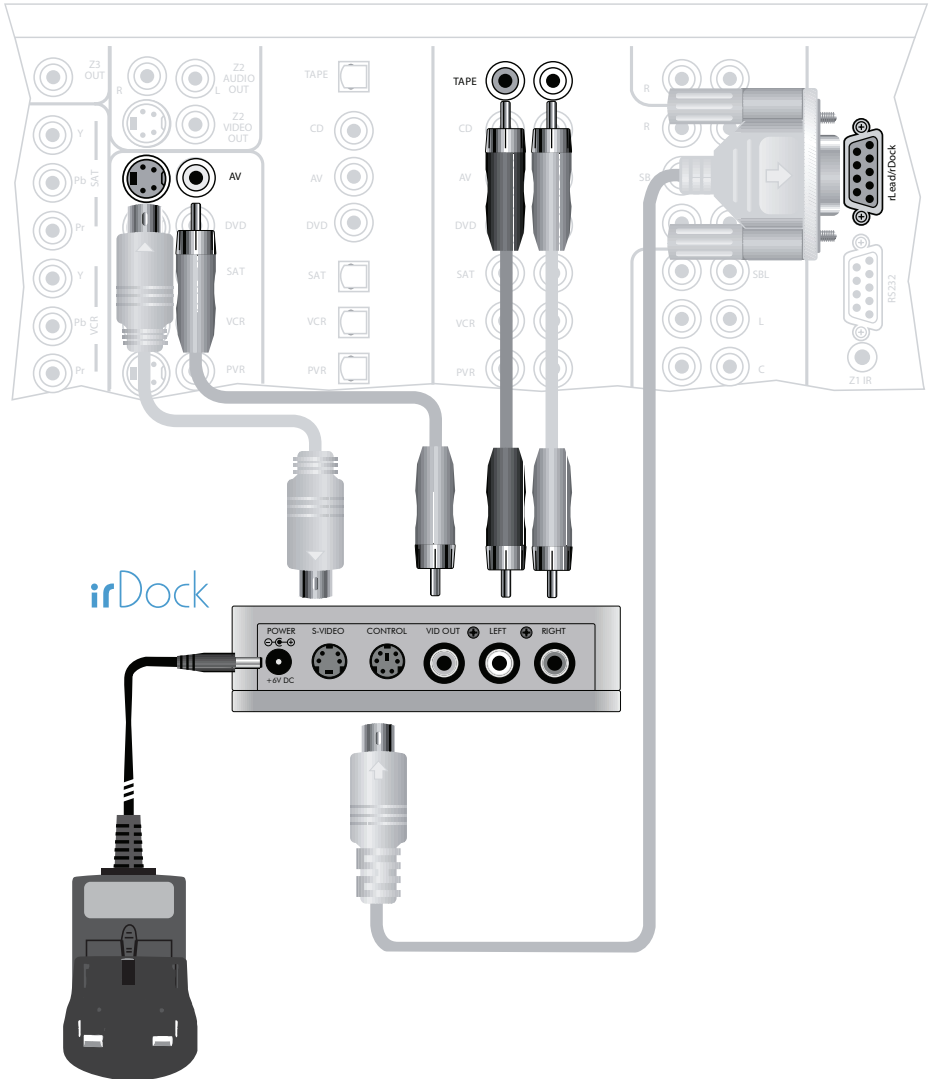


Setup — On Screen Display

Input Config	
General Setup	
Auto Setup	
Spkr Types	
Spkr Distance	
Spkr Levels	
Video Inputs	
Video Outputs	
Mode	
Zone Settings	
Network	

Audio in iPod	: TAPE
iPod Accessory	
Select the Arcam iPod accessory	

 rLead
rDock
> irDock

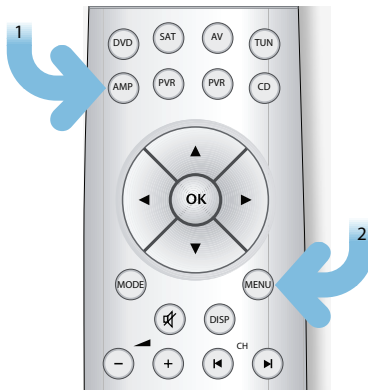

Remote control — AVR600, AV888 (CR102)

1

2

VOLUME

PHONO TAP

TV AV

RPT RND

NET IPOD

SHIFT

DVD SAT AV TUN

AMP PVR PVR CD

OK

MODE MENU

DISP

CH

DIRECT BASS TREBLE

PROC BAL SRCH

FM MONO P/TUNE STORE INFO

SETUP TITLE AUDIO SUBT

RND (Random play) SHIFT+RND = RPT (Repeat play)

Shuffle play Off Repeat play Off

Shuffle Songs Repeat Song

Shuffle Albums Repeat Album

Playback control

- ▶ Play
- Stop
- ⏸ Pause
- ⏮ Skip back
- ⏭ Skip forward

SUBT (INFO)

Song name

 
Artist name

Album name

Track no.

Navigation from the Front Panel

Song Selection

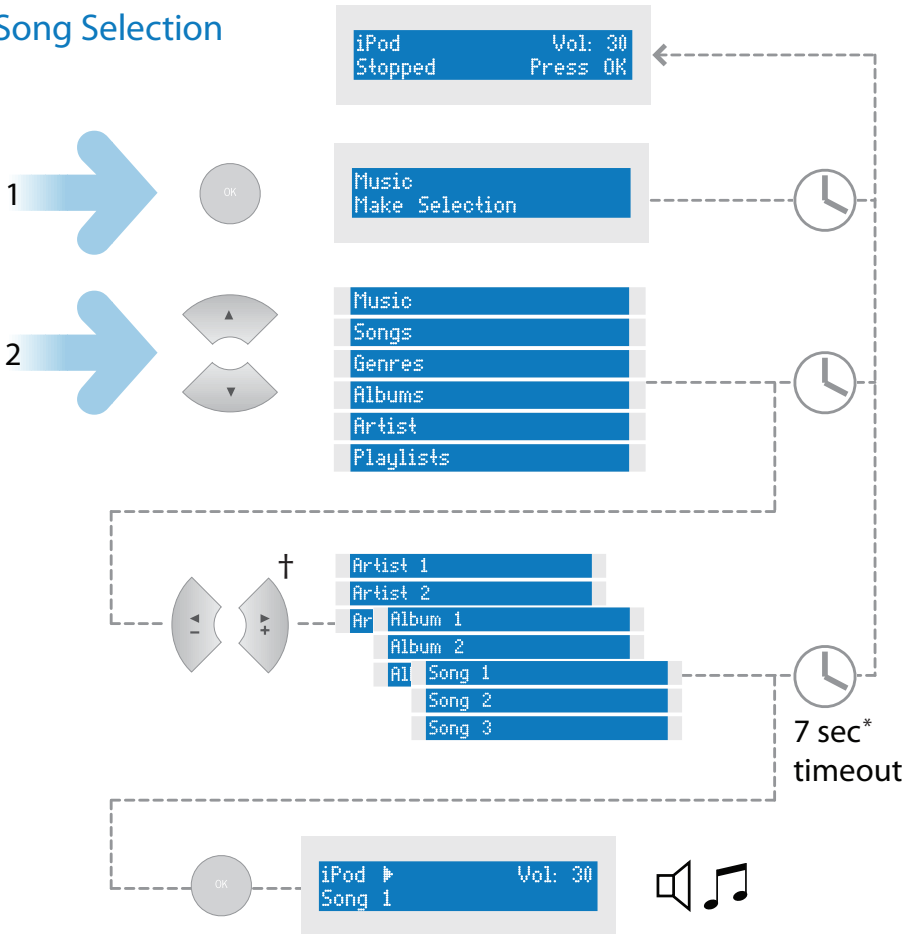


† +/- = Solo remote

◀/▶ = CR90/CR100/CR102

* Solo Music, Solo Mini & T32 only

 Changing Selection

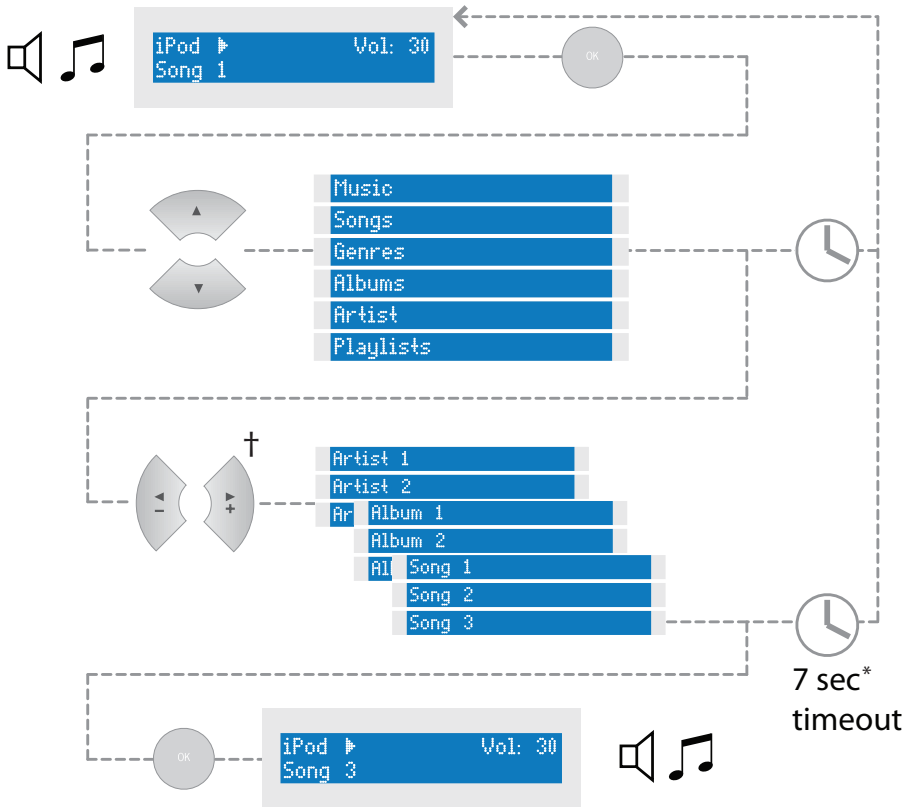




† +/- = Solo remote

◀/▶ = CR90/CR100/CR102

* Solo Music, Solo Mini & T32 only

Navigation from the On Screen Display

   Song Selection

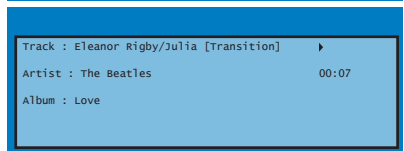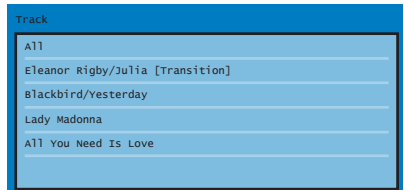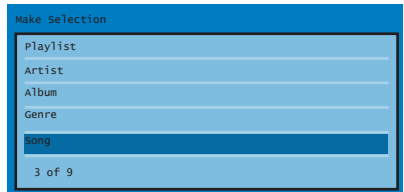

Changing Selection



 
Track

- All
- Eleanor Rigby/Julia [Transition]
- Blackbird/Yesterday**
- Lady Madonna
- All You Need Is Love

Track : Eleanor Rigby/Julia [Transition] ▶

Artist : The Beatles 00:07

Album : Love

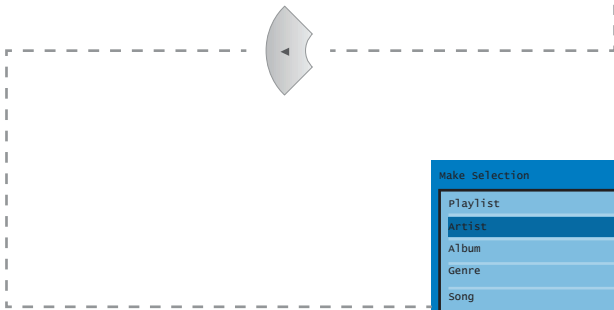

Make Selection

Playlist

- Artist**
- Album
- Genre
- Song

3 of 9

Track : Eleanor Rigby/Julia [Transition] ▶

Artist : The Beatles 00:07

Album : Love

ARCAM

<http://www.arcam.co.uk>

Pembroke Avenue, Waterbeach, CAMBRIDGE, CB25 9QR, England