


ROKSAN



ANALOGUE

Introduction

The **XPS.7** is the basic Xerxes motor drive from Roksan. It utilises similar circuitry to the other XPS motor drives and offers fantastic value as a starter power supply for the Xerxes.20 or an upgrade for the older model XPSI, II III and XPS3.5. It is important to note that the **XPS.7** comes with the standard 5-pin connector for use with Xerxes.X and Xerxes.20 and it should be converted to 4-pin connector for use with the original Xerxes record player. The **XPS.7** can also be used as an upgrade with the Radius and Radius 3, however this requires modification to the Radius.

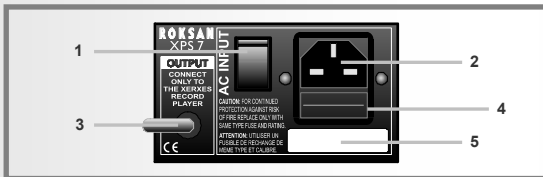

- 1 _____ AC Mains Power Switch
- 2 _____ IEC Mains Inlet Socket
- 3 _____ XPS Output Cable
- 4 _____ AC Mains Fuse Holder
- 5 _____ Voltage & Fuse Rating Label

CONNECTING MOTOR DRIVE CABLE

Carefully attach the XPS output cable connector to the Xerxes input socket at the back of your record player. With the XPS on, select the speed according to the record you wish to play from the speed control switch (6) on the front of your **XPS.7**. The speed indicator LED (7) will glow: **Green** for **33** and **Red** for **45** rpm.



- 6 _____ Speed Indicator LED
- 7 _____ Speed Control Switch

Specification

XPS.7	Basic Xerxes Motor Drive Module
Output Voltage _____	16.5 Vac \pm 0.5 Vac rms (33 rpm)
Output Voltage _____	16.5 Vac \pm 0.5 Vac rms (45 rpm)
Phase _____	90 degrees \pm 5 degrees
DC Offset _____	<50 mV
THD+N _____	< 0.1%
Output Impedance _____	< 0.5 Ohm
Dimension _____	90 x 140 x 50 (WxDxH)mm



All specifications are liable to change without notice. E&OE

PRINTED IN ENGLAND

6 NORTHFIELD INDUSTRIAL ESTATE BERESFORD AVENUE ALPERTON MIDDLESEX HA0 1NW ENGLAND UNITED KINGDOM
 TELEPHONE +44(0)208 900 6801 / 6802 FACSIMILIE +44(0)208 900 0734 www.roksan.co.uk email info@roksan.co.uk